




#939 T

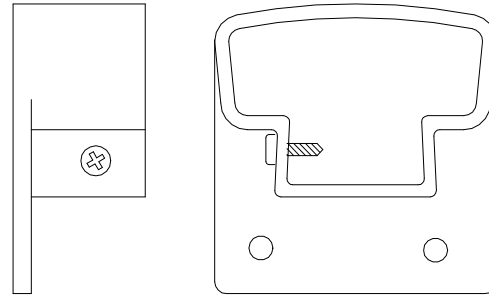

#947 T

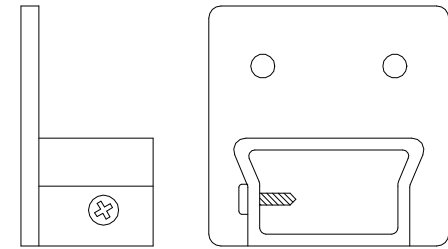


#947 B

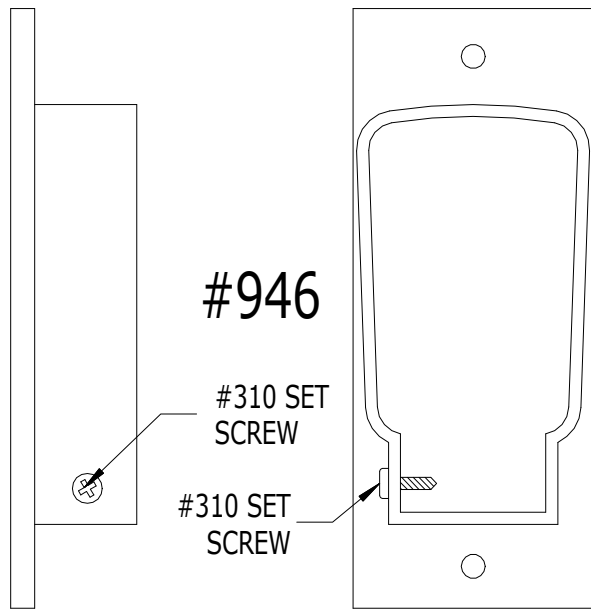


#946

#310 SET SCREW

#310 SET SCREW

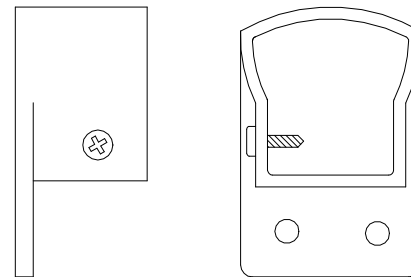

#36T

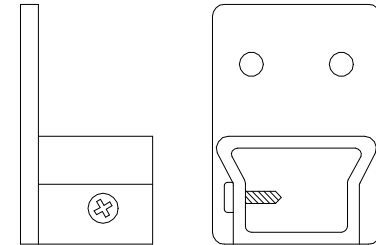

#36B

AFTER RAILS ARE IN PLACE DRILL 1/8" HOLE THROUGH BRACKET & RAIL THEN INSERT #310 SCREW (#8 X 1/2" PANHEAD).

PART NO.

DESCRIPTION

SET SCREW



Aluminum Products, Inc.