






9008 9008 9008 9008 2 2/16\*




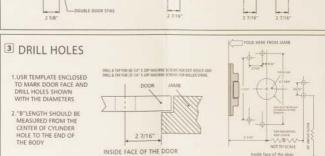

# 4 INSTALL KEY CYLINDER

If required or skip to srep 5



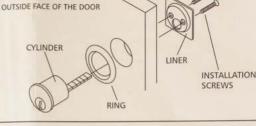

## 5 INSTALL BODY


 REMOVE THE HEAD COVER AND THE SCREWS ON THE END COVER

 ALIGN THE SCREW HOLES WITH


THE HOLES ON THE DOOR

3 TIGHTEN THE SCREWS ON THE

3.TIGHTEN THE SCREWS ON THE BODY AND THE LINING OF END COVER

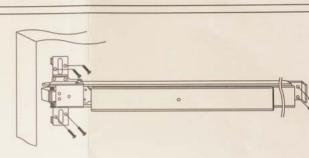


#### 6 INSTALL BOTH HEAD AND END COVER

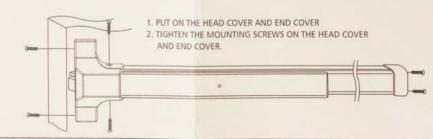

#### **INSTALL ROLLER STRIKE**

- 1.CLOSE DOOR AND MARK LATCHBOLT ON
- DOOR JAMB WITH A PENCIL

  2. PLACE ROLLER STRIKE ON DOOR JAMB.
  ALIGN CENTER OF ROLLER STRIKE WITH
  CENTER OF PENCIL MARK, THEN ALIGN
  OUTSIDE EDGE OF ROLLER STRIKE WITH






- 2. ADJUSTABLE SLOT
- 3.MARK IN THE CENTER OF 2 ADJUSTABLE SLOT AND DRILL 7/32" PILOT HOLE AND 1/4"-20P THREAD AT MARKED LOCATIONS THEN TIGHTEN WITH 1/4"-20P FLAT HEAD SCREWS. OPEN AND CLOSE DOOR TO CHECK IF LATCHBOLT CAN EXTEND AND RETRACT PROPERLY. ADJUST ROLLER STRIKE IF NECESSARY.


  4.WITH THE ROLLER STRIKE IN FINAL POSITION, DRILL AT THE CENTER 7/32" PILOT HOLE AND 1/4"-20P THREAD AND TIGHTEN
  - WITH 1/4"-20P FLAT HEAD.

    3. DRILL 7/32"
    HOLE,TAP
    1/4"-20P
    THREAD
- 4. 1/4"-20P FL AT HEAD SCREW

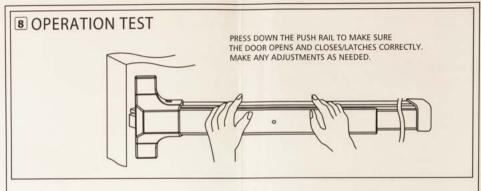

NOTE:

TO EXTEND THE LIFE OF EXIT DEVICE, LOCK THE LATCH IN THE RETRACTED POSITION WHEN DOOR IS IN CONTINUOUS USE.

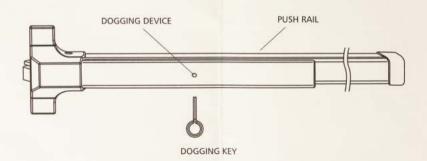


### TO UNLOCK

HOLD PUSH RAIL DOWN. TURN DOGGING DEVICE DEVICE CLOCKWISE WITH DOGGING KEY.

#### TO LOCK

HOLD PUSH RAIL DOWN. TURN DOGGING DEVICE COUNTER CLOCKWISE WITH DOGGING KEY.

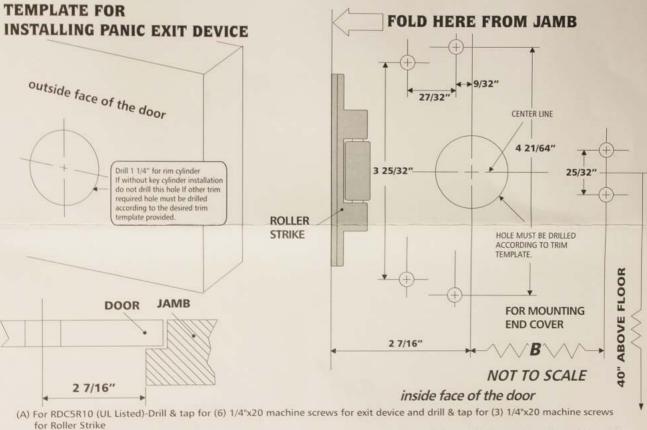

(B) For RDA5R00 (Fire Rated)-Drill 9/32" holes inside and 3/8" holes outside for the (6) thru bolts and drill & tap for (3) 1/4"x20 machine screws for Roller Strike.